

**click**<sup>®</sup>

# RECHARGEABLE WORKLIGHT TELESCOPIC FEET



## INSTRUCTION MANUAL

Model: RWL300

# IMPORTANT SAFEGUARDS

---

When using battery products, in order to reduce the risk of fire and injury to persons, basic safety precautions should always be followed. Please read all instructions carefully prior to use, even if you are quite familiar with the type of product. Please retain these instructions for future reference.

## SAFETY PRECAUTIONS

---

When using this appliance, below safety precautions should always be followed.

- Do not immerse the product in water or any other liquid.
- Do not operate the product if it is damaged.
- Indoor use only, do not use outdoors.
- Do not put the light in a fire or near any flammable object as this may cause an explosion.
- Do not look directly into the light source or point it into the eyes of others. This can lead to retinal damage.
- Charge the battery with a minimum DC 5V output via a 230-240V electrical approved USB wall charger (not included), a power board with USB ports (not included), a 12V USB car charger (not included), a power bank (not included) or other similar devices.
- Disconnect the USB cable from the product when the product is fully charged or no longer in use.
- Disconnect from the USB charger (not included) and cease to use the product immediately if it begins to show visible smoke or give off unusual smells during the charging process.
- This product is NOT a toy. Keep out of reach of small children. Young children should be supervised to ensure that they do not play with this product.

- Do not use the product with a damaged USB cable or charger (not included).
- Do not handle the product with wet hands whilst it is being charged or connected to a power source.
- When disconnecting, grip the USB charger (not included) and pull it from the socket. Never pull by the cable. Always keep the attached cable away from sharp edges in use or when removing.
- Do not immerse the USB cable or charger (not included) in water or any other liquid.
- The use of an extension cord is not recommended while charging.
- Do not charge with a damaged charger, or when the product malfunctions or is damaged in any manner.
- Do not allow children to play with the packaging materials.
- Warning : The light source and battery of this luminaire is not replaceable; when the light source and battery reaches its end of life, the whole luminaire should be replaced. Do not attempt to open the casing.
- Use the light on a horizontal and stable surface.

### WARNING

This product has not been designed for any uses other than specified in this booklet.

## SAVE THESE INSTRUCTIONS

---

# FEATURES OF YOUR RECHARGEABLE WORKLIGHT

---




USB CHARGING INPUT & OUTPUT

ON/OFF AND SETTING SWITCH

COOL OR DAY LIGHT SELECT SWITCH

BATTERY INDICATOR

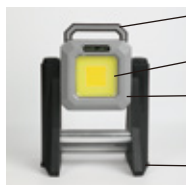

CARRYING HANDLE

3000LM LED WORKLIGHT

ADJUSTABLE LIGHT HEAD


FEET

EXTENDABLE SUPPORT  
HEIGHT ADJUSTABLE TO MAXIMUM  
OF 1M



TYPE-C  
USB CABLE  
INCLUDED

# USE OF WORKLIGHT

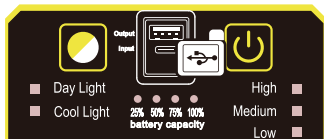

Before using the worklight for the first time, it is recommended to fully charge it. The charging time required is usually around 8 hours.

## CHARGING

1. Insert the USB-C connector into the light's input port.
2. Connect the standard USB connector to a USB wall charger, power bank, or similar device with a 5V DC output. Ensure a secure connection.
3. The battery power level indicator will display the charge level using four LEDs. The more lit LEDs, the higher the charge level. Once the charging process is complete, you will notice that all four green indicator lights on the light will illuminate.
4. Cover the USB charging port. This step helps protect the port from dust, debris, and moisture.

**Note:** To extend battery life, recharge the worklight after each use.

## OPERATION

### ON/OFF Button

1. By continuously pressing the ON/OFF button, you can cycle the light through three functions in a specific order: OFF, Low, Medium-High, and then back to OFF.
2. Long-pressing the button to switch on the Red light mode. While the red light is on, press the ON/OFF button once. The

light switches to the red flash mode. Press again than back to OFF.

### Cool or Day Light Button

Press the button to select Cool or Day light.

## POWERBANK

The worklight has a 5V 2A USB output port that can be used to charge other devices, and an input charging port that is used solely for recharging the worklight itself.

### Technical Data

Rechargeable battery	Li-ion 3.7V 9000mAh
Lighting duration	High setting: Approx. 5hours (Cool light)
	Low setting: Approx. 20hours
Brightness	High setting: 3000lm (Cool light)
Charging time	Approx. 8hours
Protection class	IP44 (USB cover closed completely)
Input	DC 5V 2A
Output	DC 5V 2A

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

## CARE AND MAINTENANCE

**Switch the light off and disconnect the charger from the socket before cleaning. Switch the device off before cleaning.**

1. Fully charge the battery every six months, even if the worklight has not been used.
2. Clean the worklight with a soft, dry cloth. Do not use any form of abrasive cleaner or solvents to clean it. Never immerse it in the water or any other liquid.
3. Store the worklight in a clean, dry, and dark place. Do not expose it to temperature over 35°C or under -15°C. Avoid direct sun light.

**Caution:** Never use a damaged product (e.g., worn cable, cracked casing).

# DISPOSAL

---

If the product is no longer suitable for use dispose of it in an environmentally friendly manner in accordance with your local council requirements.

Dispose of used batteries according to your local council requirements.

# WARRANTY CONDITIONS FOR PURCHASE IN AUSTRALIA & NEW ZEALAND

---

Thank you for purchasing one of our quality Click products. Please keep your receipt as proof of purchase, as this will authenticate your warranty. Any claim under this warranty must be made within 1 year of the date of purchase of the product. To make a claim under the warranty, take the product(with proof of purchase) to any Bunnings store(see [www.bunnings.com.au](http://www.bunnings.com.au) for store locations).

Bunnings Group Ltd bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use. This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law or the Consumer Guarantees Act(NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect.

The warranty covers domestic use only and does not apply to commercial applications. neglect. The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by Bunnings Group Limited.

ABN 26 008 672 179, Botanicca 3, Level 2 East Tower 570 Swan Street, Burnley, VIC 3121,  
e-mail: [CustomerSupport@bunnings.com.au](mailto:CustomerSupport@bunnings.com.au), PH: 1800 797 586.

Bunnings NZ Limited: PO Box 14436, Panmure Auckland 1741,  
email: [OnlineEnquiries@bunnings.co.nz](mailto:OnlineEnquiries@bunnings.co.nz) PH: 1800 797 586

