
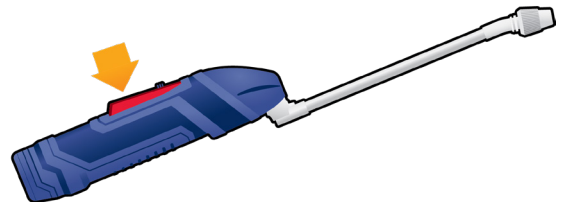


**30**<sup>®</sup>  
SECONDS

# Instructions for hand held battery powered sprayer

**IMPORTANT - PLEASE READ BEFORE USE!**

**Includes 4xAA Batteries**

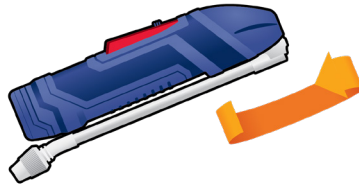

## DIRECTIONS

1. Remove sprayer from holster, stretch out suction hose to eliminate kinks. Insert hose with weighted ceramic filter into bottle, then screw attached cap on bottle.
2. Rotate lance from storage status to operating status.
3. Remove insulation strip as per tips on it.
4. Slide safety switch to unlock position.
5. Point spray nozzle at target area.
6. Press trigger to spray.

## HELPFUL HINTS

- To extend battery life, remove batteries if sprayer will not be used for a long period of time. Re-install before next use.
- Ensure safety switch is in the LOCK position when changing batteries or in storage.
- If the sprayer motor does not run, check the batteries for correct polarity in the battery hatch inside the handle.
- If the sprayer motor runs but does not spray, check ceramic weight is under the level of fluid, lower the sprayer to the level of the fluid in bottles to assist priming. Once primed the sprayer should function normally.
- If the spray is inconsistent, the nozzle and/or the weighted ceramic filter may be partially blocked. Flush with clean water and reconnect.
- Do not mix new batteries with old. Do not mix alkaline batteries with standard or rechargeable batteries.
- Hold wand and twist gently when adjusting nozzle. Do not over-tighten wand tip spray adjuster.
- Can be used with water-based cleaners, detergents, garden chemicals etc, that are recommended for spray applications, in strict accordance with the product label, following all directions and cautions as specified on the product label.
- Mix to chemical manufacturer's recommendation as per the intended spray to be applied, never mix products together unless recommended by manufacturer.

## IMPORTANT AFTER USE

- Flush sprayer thoroughly with clean water for at least 2 minutes by pressing trigger.
- Slide safety switch to LOCK position (click to lock).
- Rotate lance to storage status, return sprayer to holster for storage.

## SAFETY FIRST

- KEEP AWAY FROM CHILDREN, This sprayer is not child-resistant.
- Keep the safety switch in the LOCK position when not in use.
- Never place the nozzle in your mouth.
- Do not spray towards people or pets.
- Do not spray towards electrical outlets or components.
- Do not spray in an enclosed space.
- Do not smoke or eat while mixing spray materials or spraying and wash up afterwards.
- Certain chemicals may require protective goggles, breathing masks, or protective clothing.
- Danger - Never use with:
  - Flammable solvents, combustibles or oils.
  - Any caustics, acids, corrosive or oxidising solutions.
  - Any liquid that poses a health hazard if sprayed.
  - Liquids that harden or congeal such as paints or glues with viscosity more than 2000cPs.