



Arma™

Model: NV206R

Smoke Alarm Troubleshooting Guide

PROBLEM

SOLUTION

Smoke alarm does not sound when testing.

- Remove smoke alarm from bracket and check the battery is properly connected to battery connector.
- If the alarm still fails to operate, check the battery has full power.
- Replace the battery if required.

The alarm chirps with red LED flashing once every 32 seconds.

- The battery voltage is low, replace the battery. See **Replace Battery** section in the User Guide (link below).

The alarm chirps every 32 seconds between 2 flashes of the LED. (The alarm goes into fault mode.)

- Clean the smoke alarm referring to the **Maintenance and Cleaning** section in the User Guide (link below).
- Replace with a new smoke alarm if the problem still exists.

Smoke alarm sounds unwanted alarms intermittently or when residents are cooking, taking showers, etc.

- Press test button to pause alarm.
- Vacuum smoke alarm. Refer to the **Maintenance and Cleaning** section in the User Guide (link below).
- Smoke alarm may be incorrectly located. Move to new location.

The alarm sounds different to normal. For instance, the alarm starts and stops.

- Clean smoke alarm. Refer to the **Maintenance and Cleaning** section in the User Guide (link below).
- If there are still failures during warranty, you can return to your retailer.
- If the unit is out of warranty, replace the alarm.

[Click here for User Guide](#)

or browse to <https://newfield.help/nv206r>

© NEWFIELD GROUP LTD November 2020